



USER'S MANUAL KK-9710

DIAGRAM & FUNCTION INDICATION

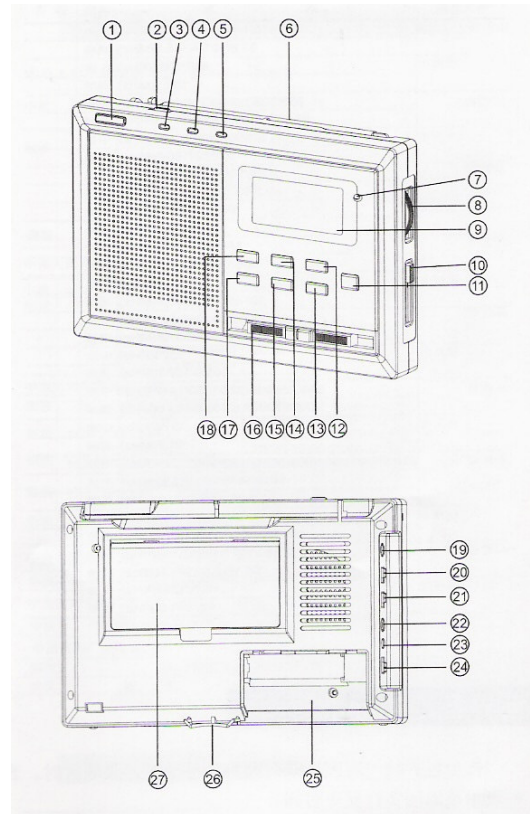

- | | |
|-----------------------|---------------------------|
| 1. Auto night light | 15. Time set |
| 2. Manual night light | 16. Band selector |
| 3. Tuning indicator | 17. Min adj. |
| 4. FM indicator | 18. Hr adj. |
| 5. Am indicator | 19. External antenna jack |
| 6. Antenna | 20. Treble |
| 7. Sleep indicator | 21. Bass |
| 8. Tuning knob | 22. Earphone jack |
| 9. Screen | 23. External D.C. jack |
| 10. Volume control | 24. Power |
| 11. Sleep on | 25. Battery compartment |
| 12. Alarm on/off | 26. Stand |
| 13. Sleep off | 27. Supporting rack |
| 14. Alarm set | |

LCD EXPLANATION

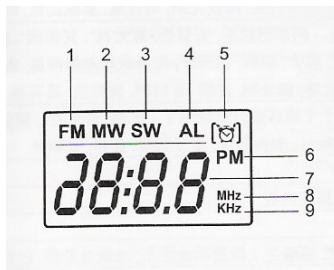

1. FM band
2. AM band
3. SW band
4. Alarm time set
5. Timer on
6. P.M.
7. Time and frequency
8. SW and FM unit
9. AM unit

POWER

Install Battery

1. The radio uses four AA1.5V batteries, please put the new batteries in the battery slot according to the polarity.
2. If the sound is distorted or volume is faint, please change the batteries.

Attention :

1. Do not mix new and old batteries together.
2. In order to prevent the leakage of the electrolysis liquid or danger of explosion, do not charge, heat or resolve the batteries.
3. If you do not use the radio for a long time, please take out the batteries.

Use external power

Please use output DC 6V 300mA adapter , check the polarity.

RECEPTION OPERATION

Power Switch

When you move the Power switch (24) to the position of ON, the radio begins to work. When you move the Power switch (24) to the position of OFF, the radio is turned off, the time is displayed the display screen.

Band Switch

Press Band selector (16) to select among FM, AM and SW 1-10. If FM is selected, the FM indicator (4) will light up. If AM/SW is selected, the AM indicator (5) will light up.

Search Station

After the band is selected, turn the Tuning knob (8) and watch the station frequency on LCD. Search your desired station program.

The Tuning Indicator (3) will light up, when you receive the correct station and the station signal is sufficiently strong.

Volume Control

When the radio is in the state of work, turn the Volume control (10) to adjust to your desired volume.

Sound Adjustment

You may improve the listening experience by pressing the button (20) for treble and button (21) for bass.

Night light

Manual – Press the Manual night light button (2) to turn the night light on and off.

Auto – Press the Auto night light button (1), the night light will turn on for 10 seconds.

TIME SET

1. The 12 hours system is used in the radio. The PM on the display indicates afternoon time.
2. After installing batteries, under the clock mode, the “12:00” appears on LCD.
3. Keep the Time set button (15) pressed, meanwhile press the Hour adjustment button (18) to adjust hour, (17) to adjust minute.
4. You can set the time with the same procedures when the radio is on.
5. When the radio is on, you can check the time by pressing the Time set button (15).

ALARM SET

Timer Set

1. Under the clock , keep the Alarm set button (14) pressed.
2. Press the Hour adjustment button (18) to adjust hour and press the Minute adjustment button (17) to adjust the minute.

Alarm Time Look-up

Press and hold the Alarm set (14) to look up the alarm time.

Alarm On/Off

1. Press the AL on/off switch button (12) once , the symbol of a clock displays on the screen, the wake-on-radio function begins to work.
2. When the turn on time reaches, the radio will automatically turn on. The last band frequency will display on the screen.

Power Off

1. Press the AL on/off button (12) if you would like to turn off the radio. (If the radio is turn on through timer , the Power button will not function)

SLEEP

1. Under the clock mode , press the Sleep on (11) to turn on the radio , the Sleep indicator (7) will light up, the radio will turn off in one hour .
2. If you would like to turn off the radio earlier , press the Sleep off (13) button.
(If the sleep function is turned on , the power button does not function)

ANTENNA

1. The radio receives MW by using the internal magnetic antenna. You can get the best reception by rotating the direction of the radio.
2. When you receive FM station, please pull out the telescopic antenna to get the best reception by changing its length and angle.
3. When you receive SW station, please pull out the telescopic antenna and keep it vertical to get better reception.
4. You may connect the external wiring antenna to improve the reception of FM and SW.

TECHNICAL INDEX

1. Frequency Range :
 - FM 76-108 MHz
 - AM 526.5 - 1606.5 KHz

- SW1 3.85-4.10 MHz
- SW2 4.70 – 5.1MHz
- SW3 5.9-6.25 MHz
- SW4 7.00-7.3 MHz
- SW5 9.45-10.00 MHz
- SW6 11.60-12.10 MHz
- SW7 13.55 – 13.85 MHz
- SW8 15.05-15.65 MHz
- SW9 17.45 – 17.95 MHz
- SW10 21.40- 21.90 MHz

2. Noise Limit Sensitivity

- FM $\leq 22\text{dBu}$
- AM $\leq 72\text{dBu}$
- SW $\leq 42\text{dBu}$

3. Single Signal Selectivity $\geq 10\text{dB}$

4. Power : DC 6 or 4x AA batteries

5. Speaker : 77mm/4ohm/1W

6. Unit Size : 181 x 116 x 33 mm

7. Weight : 445g (without battery)