


KK-C650 Operating Instructions

Radio design :

外观图与功能指示

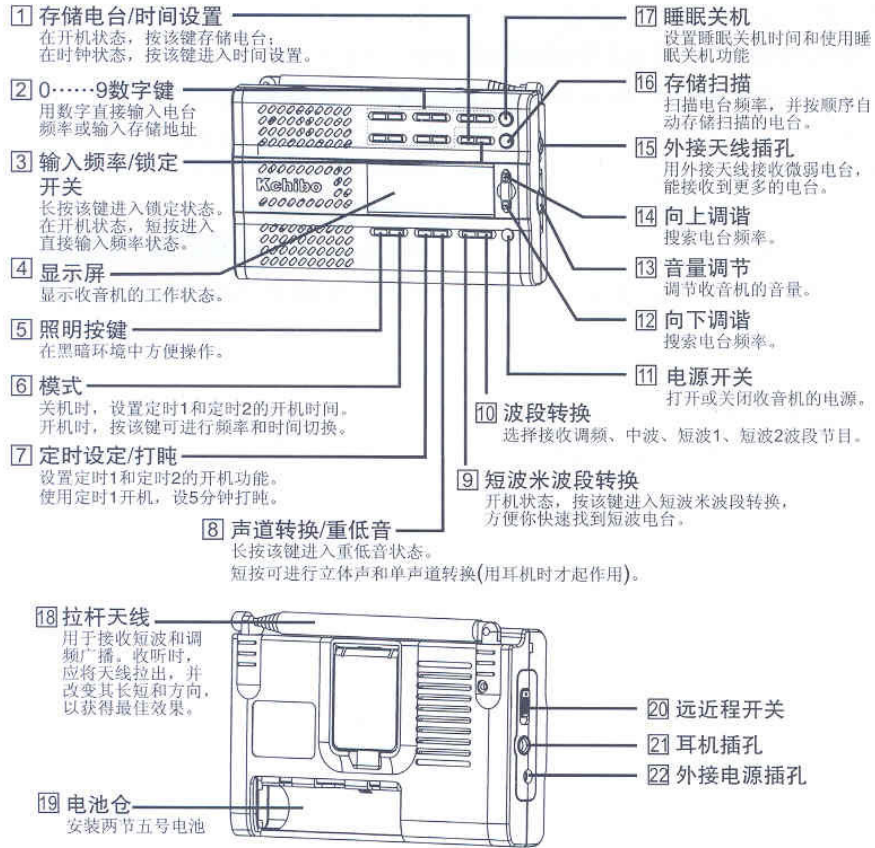

4

1. Memory / Time Set	12. Down Search
2. 0-9 Numeric Buttons	13. Volume Control
3. Direct Frequency Input/ Key Lock	14. Up Search
4. LCD Display	15. External Antenna Jack
5. Night Light	16. Scan
6. Mode	17. Sleep
7. AL. ON/OFF / Snooze	18. Telescopic Antenna
8. Mono/Stereo/Megabass	19. Battery Compartment
9. SW Meter Band Switch	20. Local/DX Switch
10. Band Switch	21. Earphone Jack
11. Power	22. D.C. Jack

Battery Installation :

1. Please install 2AA batteries.
2. Please replace batteries when you see the low battery indicator.
3. Please replace your batteries within 30 seconds, otherwise all memory will be lost.

Radio Reception :

Band Selection:

Under the radio mode, press the Band Selection button (10) to switch between FM, MW, SW1 and SW2.

SW Meter Band :

Press the SW Meter Band Selection button (9) to select the meter band in the following order :

SW1 : 3.15 – 3.85 – 4.75 – 5.90 – 7.00

SW2 : 9.4 – 11.65 – 13.50 – 15.10 – 17.55 – 21.40 – 25.60

Manual Search :

1. Turn on the radio
2. Select the band
3. Press + (14) or - (12) until you locate the station. For each time you press, the frequency will increase or decrease by one step.

Auto Search :

1. Turn on the radio
2. Select the band.
3. Press + (14) or -(12) for 2 seconds. Scanning will stop at the next station.
4. Press + (14) / -(12) anytime to stop the searching process.

Frequency Step :

FM : 0.1MHz

MW : 9KHz

SW : 0.005MHz

Direct Frequency Input :

1. Press the Direct Frequency Input button (3). The LCD will display the unit indicator. Input the frequency with the numeric buttons.
2. Press the Direct Frequency Input button(3) again to confirm.

Examples :

1. FM 99.30MHz : Press Band Selector (10) to switch to FM. Press (3) buttonPress 9-9-3.....Press (3) button to confirm.
2. SW 15.195MHz : Press Band Selector (10) to switch to SW2. Press (3) button Press 1-5-1-9-5.....Press (3) button to confirm

Memory Presets :

1. Use auto, manual or direct frequency input to locate the station.
2. Press the MEMORY button (1) , the LCD indicator will blink.
3. Press 1-10 within 5 seconds to select the channel. Press the Memory button (1) again to confirm.
4. Under the radio mode, press the numeric button to call for stored station.

Note : You can store up to 10 stations for each band (FM, MW, SW) , When new frequency is selected , the old memory will be erased. By default of the microchip, the channel 8 of SW2 cannot store any station.

Auto Scan :

1. Under the radio mode, press the scan button (16) , the radio will automatically search and store all channels until memory full.
2. You may stop the search anytime by press the scan button (16) again.

Mono/Stereo/Megabass :

Stereo can only be operated when the earphone is plugged in (12). Press the Mono/Stereo (8) to switch to stereo reception. Long press the Mono/Stereo (12) to turn on the megabass.

Use of Antenna :

1. AM : The built-in magnetic antenna inside the radio is used. Rotate body to get best reception.
2. FM : Extend the antenna. Try different angles to get the best reception
3. SW : Extend the antenna. Make the antenna vertical.
4. You can improve the radio reception by using the extension wiring antenna. Plug the wire into the extension antenna jack (15). Hook the other end to the window.

Time setting :

1. When batteries are installed, the "0:00" will display.
2. Press the Time Set (1) button. The hour digit will blink. Press the + (14) or – (12) button to set the hour . Long press for fast moving.
3. Press the Time Set (1) button again. The minute digit will blink. Press the + (14) or – (12) button to

set the minute.

4. Under the radio mode, you can press the mode button (6) to check the time , alarm time 1 and 2. It will resume to frequency display after 10 seconds.

Alarm Time Set :

Alarm Time 1 Setting :

1. Under the clock mode, press mode button (6) . You will see the Alarm Time 1 and the icon.
2. Press the Time Set button (1) , the hour digit will blink. Press the + (14) or – (12) to set the hour.
3. Press the Time Set button (1) again , the minute digit will blink. Press the + (14) or –(12) to set the minute.

Alarm On/Off for Alarm Time 1:

1. Under the clock mode , Press the AL ON/OFF(7) button to turn on the alarm .
2. The radio will turn on at the preset alarm time 1.
3. The radio will turn off after one hour's operation.
4. Press the Power button (11) if you would like to turn off the radio earlier.
5. If you see “AL1” icon , that means the radio will turn on daily at the preset Alarm Time 1.
6. Press the AL. ON/OFF (7) to turn off the function.

Snooze function :

When the radio is turned on by the timer function, press the Snooze button (7) and the radio will suspend operation in 5 minutes.

Alarm Time 2 Setting :

1. Under the clock mode, press Mode button (6) twice. You will see the Alarm Time 2 and the icon.
2. Press the Time Set button (1) , the hour digit will blink. Press the + (14) or – (12) to set the hour.
3. Press the Time Set button (1) again , the minute digit will blink. Press the + (14) or –(12) to set the minute.

Alarm On/Off for Alarm Time 2:

4. Under the clock mode , Press the AL ON/OFF (7) button to turn on the alarm 2 .
5. The radio will turn on at the preset alarm time 2.
6. The radio will enter into sleep mode of 100 minutes.
7. When the sleep time is still in display, press the Sleep button (17) to set the sleep time.
8. If you see “AL2” icon , that means the radio will turn on daily at the preset Alarm Time 2.
9. Press the AL. ON/OFF (7) to turn off the function.

Alarm On/Off for Alarm Time 1 and 2 :

1. Press the AL. On/Off button (7) three times. You will see both the AL1 and AL2 icons.
2. The radio will turn on at the preset times – Time 1 and Time 2.
3. Press AL. On/Off button (7) anytime to turn off the function.

Sleep Function :

1. Under the clock mode , press Sleep (17) button once to turn on the radio. The sleep icon and “100” min will appear.
2. Within 4 seconds, press Sleep (17) button to adjust the sleep time in the following order :
100-90-80-70-60-50-40-30-20-10- cancel . The radio will shut off at the preset time.
3. Under listening mode, do the same of the above to set the shut down time.
4. You can turn off the radio by press the Power(11) button if you would like to turn off the radio early.

Specifications :

1. Frequency Range
 - FM 87-108 MHz
 - AM 522 - 1620 KHz
 - SW1 3.00 – 9.00 MHz
 - SW2 9.00 – 26.10 MHz
2. Memory preset (40)
 - FM (10), AM(10) , SW1(10), SW2 (10)
3. Noise Limit Sensitivity
 - FM $\leq 8\mu\text{V}$
 - AM $\leq 3\text{mV/m}$
 - SW $\leq 30\mu\text{V}$
4. Single Signal Selectivity $\geq 15\text{dB}$
5. Power : DC 3V or 2 x AA batteries (not included)
6. Speaker : 50mm/12ohm/0.5W
7. Earphone jack : 3.5mm 32ohm
8. Measurement : 112 x 70 x 21 mm
9. Weight : 140g (excluding batteries)