


TECSUN GREEN-88

GREEN-88外观图及功能示意

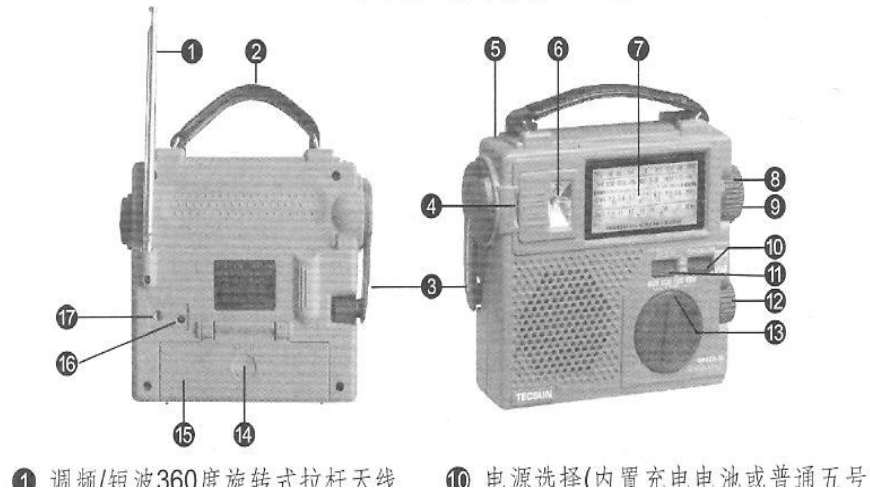

1. Antenna	10. Power Selector
2. Hand Strap	11. Emergency Light Power Switch
3. Handle	12. Volume Control
4. Opening Slot	13. Band Selector
5. Charging Led	14. Battery Compartment
6. Emergency Light	15. Rechargeable Battery
7. Tuning Display	16. D.C. Input Jack
8. Tuning Knob	17. Earphone Jack
9. Fine Tuning Knob	

Charging operation :

(I) Power charger

You can choose to charge the radio through safe mode(16 hours) or 8 hours fast mode by switching the knob on the charger.

1. Please turn off (10)the radio when charging function is on.
2. Please disconnect the the power source when charging function is completed.
3. Please do not turn on the emergency light during charging operation.

(II) Hand Crank Charging

1. Turn the Power Selector(10) to off mode.
2. Rotate the Handle (3) clockwise and anticlockwise can charge the radio.
3. Rotate the handle for 120 rounds in one minute. The radio can operate in around half and hour.

Radio Operation:

1. Turn the Power Selector (10) to “Recharge Battery” or “AA Battery” to turn on the radio depending on the choice of power supply. Turn the Power Selector to off position to turn off the radio.
2. Rotate the Volume Control (12) to set the required volume.
3. Select the required band through the Band Selector (13).
4. You can search for the station with the Tuning(8) and the Fine Tuning Knob(9).
5. To listen to AM band, you can rotate the radio for best reception.
6. To listen to FM or SW band, please extend the antenna for best reception.

Specifications :

1. FREQUENCY

- FM 87-108MHz
- AM 525-1710 kHz
- SW1 3.20 - 7.60 MHz
- SW2 9.20 - 22.0 Mhz

2.SENSITIVITY

- FM < 5 μ V
- AM < 1mV/m
- SW < 50 μ V

3. POWER : DC 4.5V or 3 X AA BATTERIES (NOT INCLUDED) or 650mAh 3.6V RECHARGEABLE BATTERY (INCLUDED)

4. OUPUT : 150mW

5. MEASUREMENT : 6 3/4" X 5 3/4" X 2 1/4"