


## USER'S MANUAL DE1107

### ILLUSTRATION

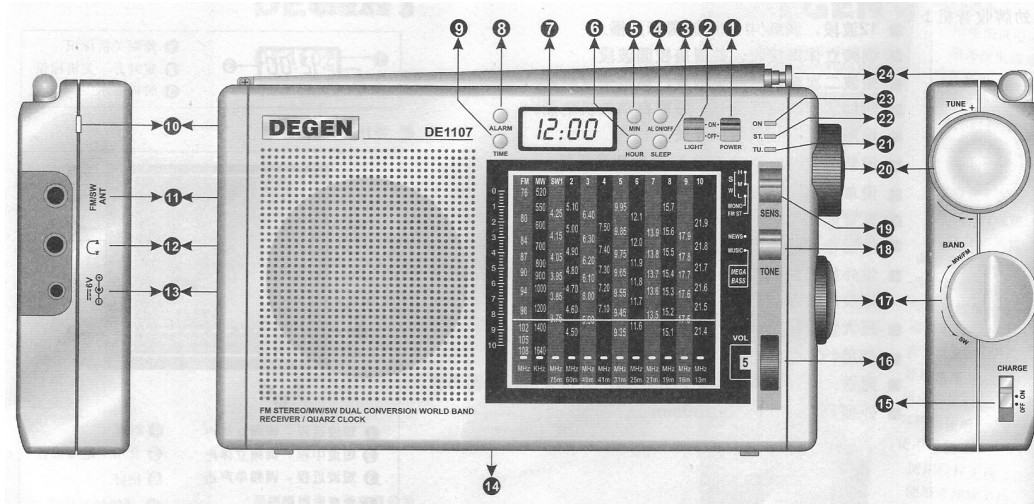

1. Power
2. Backlight
3. Sleep
4. AL On/Off
5. Min
6. Hour
7. LCD Display
8. Alarm
9. Time
10. Hand Strap
11. External Antenna Jack
12. Earphone Jack
13. External Power Jack
14. Battery Compartment
15. Battery Recharge
16. Volume
17. Band Switch
18. News/Music, Megabass
19. SW Sensitivity, Stereo/ Mono
20. Tuning Knob
21. Tuning Indicator
22. Stereo Indicator
23. Power Indicator
24. Telescopic Antenna

### BATTERY RECHARGE

1. Connect the power adapter with the radio. (Buyer please aware that it is a 220V power adapter)
2. Turn the Battery Recharge button to on position.
3. It may take up to 16 hours to fully recharge the batteries.

## **TIME SETTING**

### Time Display

1. The unit takes 12 hour system.

### Time Set

1. Press and hold the Time button.
2. At the same time short press the Hour and Min buttons to adjust the time.

## **POWER ON/OFF**

### On/Off

1. Turn the Power button to on position to switch on the radio.
2. Turn the Power button to off position to switch off the radio.

### Sleep power on

1. Short press the Sleep button to turn on the radio. You will see the sleep icon appear.
2. If no time is set, the radio will turn off in 59 minutes.

### Sleep power off

1. Press and hold the Sleep button. Short press the Hour and Min button to adjust the sleep time from 0:01 to 1:59 .
2. If the sleep power off function is turned on, you can press the Sleep button to turn off the radio.  
( The Power button will not work at this moment)

### Timer on/off

1. Turn the Power to off position.
2. Press and hold the Alarm button. Set the time with the Hour and Min button.
3. After you have set the time, press the AL on/off once to turn on the function. (or press the AL on/off again to turn off the function.)
4. The radio will turn on at the preset time and turn off automatically in one hour.

## **SW SENSITIVITY**

1. “H” : Turn to this position if you are within high rise buildings.
2. “M” : Turn to this position if you are indoor and close to windows.
3. “L” : Turn to this position if you are in outdoor open space.

## TECHNICAL INDEX

1. Frequency Range :
  - FM 76-108 MHz
  - AM 520 - 1640 KHz
  - SW 3.75 – 21.90MHz
2. Meter Band
  - 75m: 3.75-4.25 MHz , 60m 4.5-5.1 MHz
  - 49m: 5.90-6.40 MHz , 41m: 7.10-7.50 MHz
  - 31m: 9.35-9.95 MHz , 25m: 11.600-12.10 MHz
  - 22m: 13.50-13.90 MHz , 19m: 15.10-15.70 MHz
  - 16m 17.50-17.90 MHz , 13m: 21.40-21.90 MHz
3. Noise Limit Sensitivity
  - FM  $\leq 10\mu\text{V}$
  - AM  $\leq 1\text{mV/m}$
  - SW  $\leq 20\mu\text{V}$
4. Single Signal Selectivity  $\geq 40\text{dB}$
5. Power : 4 x AA batteries or 6V D.C.
6. Speaker : D77mm
7. Unit Size : 165 x 100 x 30 mm
8. Weight : 280g ( without battery)