


USER'S MANUAL DE205

DIAGRAM & FUNCTION INDICATION

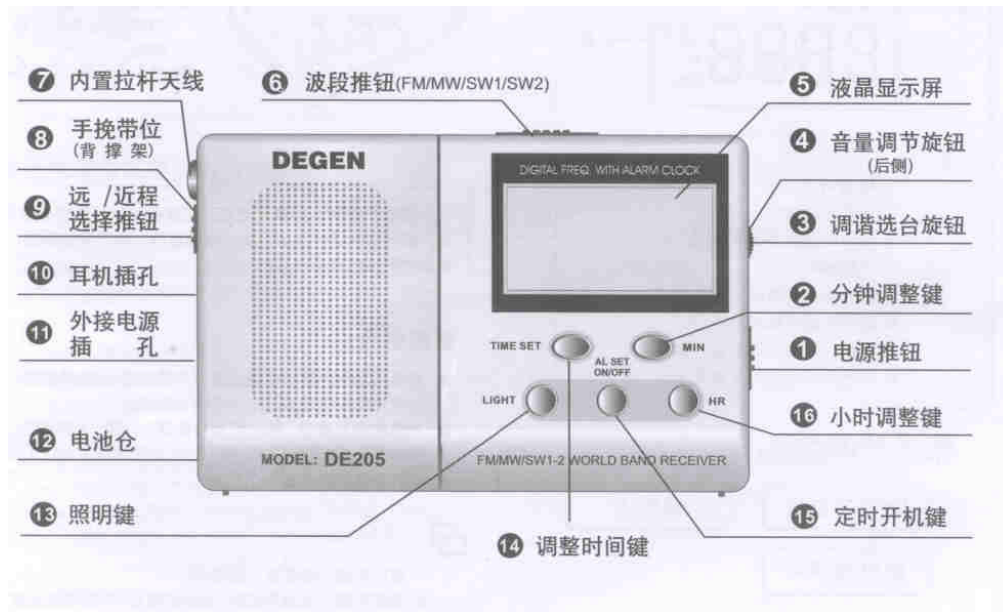

- | | |
|-------------------|-------------------------|
| 1. Power Switch | 9. DX/Local Switch |
| 2. Min Set | 10. Earphone Jack |
| 3. Tuning Switch | 11. D.C. Jack |
| 4. Volume Control | 12. Battery Compartment |
| 5. LCD Display | 13. Light |
| 6. Band Selector | 14. Time Set |
| 7. Antenna | 15. AL. ON/OFF |
| 8. Hand Strap | 16. Hr Set |

INSTALL BATTERY

1. The radio uses two AA1.5V batteries, please put the new batteries in the battery slot according to the polarity.

Replace Battery :

1. Please turn off the radio before you replace batteries.

2. The memory of the radio can last for 10 seconds, after that you may need to reset the time.

USE EXTERNAL POWER

Please use output DC 3V 300mA regulating external direct current power, check the polarity.

POWER ON/OFF

1. Turn on and off the radio with the Power Switch. (1) or
2. Make use of the alarm function : If you have set the alarm time, press the AL. ON/OFF button (15) to turn on the function.
3. Press the AL. ON/OFF (15) button again if you want to turn off the function.
4. If the function has been turned on , you may need to turn the function off before you can power off the radio.

BAND SELECTION

Select the desired band by moving the Band Selector (6) .

TUNING

After you have select the band, rotate the Tuning Switch (3) for the desired frequency.

TIME SET

1. Under the off mode, keep the Time Set button (14) pressed, meanwhile press the HR button (16) to adjust hour, Min button (2) to adjust minute.

ALARM SET

1. Under the off mode , keep and AL. SET ON/OFF button (15) pressed. Press the Hr button (14) to adjust hour and press the Min button (2) to adjust the minute.
2. The radio will automatically enter into the wake-on-radio mode and will turn on at the preset time .See the “Clock icon” on the screen.

ANTENNA

1. The radio receives MW by using the internal magnetic antenna. You can get the best reception by

rotating the direction of the radio.

2. When you receive FM station, please pull out the telescopic antenna to get the best reception by changing its length and angle.
3. When you receive SW station, please pull out the telescopic antenna and keep it vertical to get better reception.

TECHNICAL INDEX

1. Frequency Range :
 - FM 70-108 MHz
 - AM 525 - 1610 KHz
 - SW 5.90 – 18 MHz
2. S.W Meter Band
 - 49m 5.95-6.20MHz
 - 41m 7.10-7.30MHz
 - 31m 9.45-9.95MHz
 - 25m 11.65-12.05MHz
 - 21m 13.60 – 13.80 MHz
 - 19m 15.10-15.60MHz
 - 16m 17.55-17.90MHz
3. Noise Limit Sensitivity
 - FM $\leq 10\mu\text{V}$
 - AM $\leq 1\text{mV/m}$
 - SW $\leq 30\mu\text{V}$
4. Single Signal Selectivity $\geq 20\text{dB}$
5. Power : DC 3V or 2 x AA batteries
6. Speaker : 57mm/4ohm/0.5W
7. Unit Size : 110 x 71 x 20 mm
8. Weight : 146g (without battery)